




AC-XII.

2nd gen BIBO filter cartridge

Filter change instructions

The BIBO AC-XII filter cartridge should be replaced every 12 months.


1. Turn the blue shut off valve at the back of your BIBO to the "off" position.
2. Dispense a small amount of cold water (this releases the pressure in your BIBO which will help you remove your filter).
3. Remove the lid on the top of your BIBO by simply lifting it off from the back.
4. Locate the filter & turn it anti-clockwise until the cartridge releases.

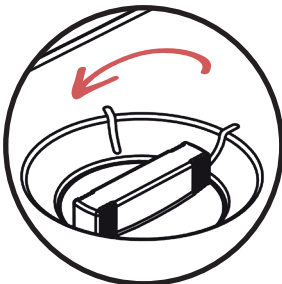

5. Pull the cartridge up & out of your BIBO (you can pop it in your recycling).
6. Remove the new filter from its packaging & insert into the BIBO.



7. Push the filter down & turn clockwise into place. Replace your BIBO lid.

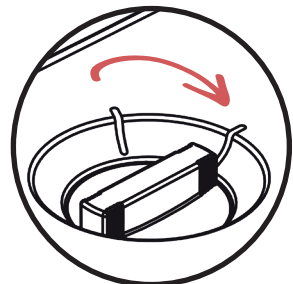

8. Reset the filter countdown timer within the menu settings in your BIBO:

- Press the white menu button to enter your settings menu.



- Use the red hot cup to navigate to "UV/Filter Replacement".



- Use the white menu button to select "Filter" & to reset the countdown timer.



9. Turn the blue shut off valve at the back of your BIBO to the "on" position.

10. Flush 6 litres of cold water through the BIBO to activate your filter.









Is this your first AC-XII filter change?

If this is the first time you are using this filter with your BIBO Classic, you will need to edit your settings so that your BIBO reminds you to change your filter at the right time.

Follow the steps below:

- Press the following keys in the order below to enter timer settings:



- Enter the passcode "888888" - use the white cup  to select number and the red hot cup  to scroll across.
- Press the white menu key  to confirm and again to select "filter".
- Use the red hot cup to navigate to the number of days. 
- Adjust the number of days to "360" using the cold cup key. 
- Press the white menu key  to confirm the setting - after 30 seconds, the screen will revert to the home screen.